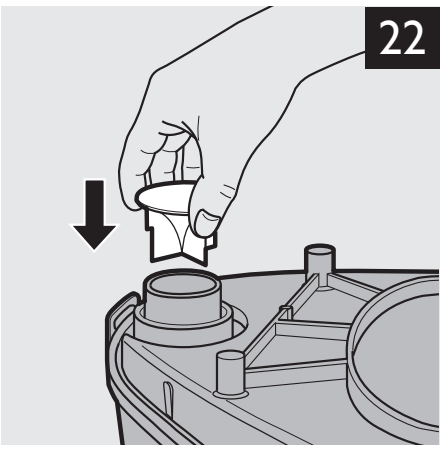
Register your product and get support at

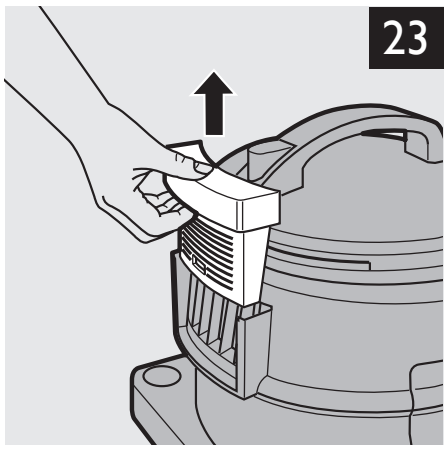
www.philips.com/welcome

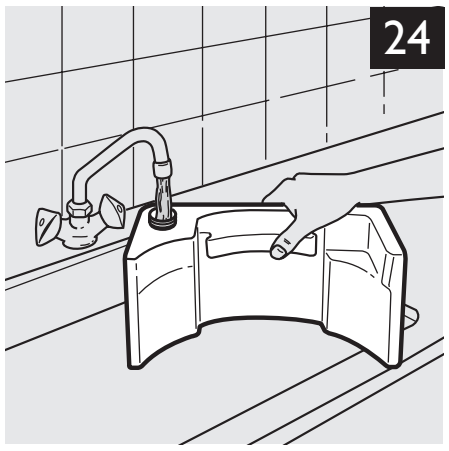
FC6840 series

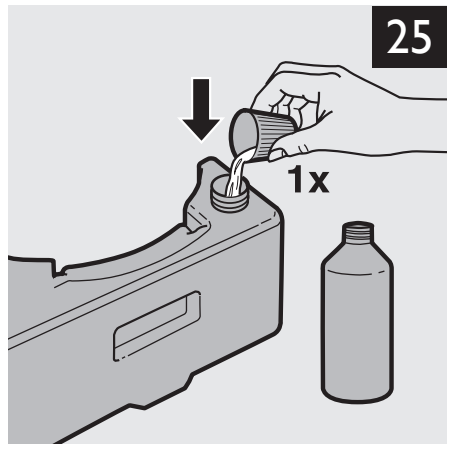


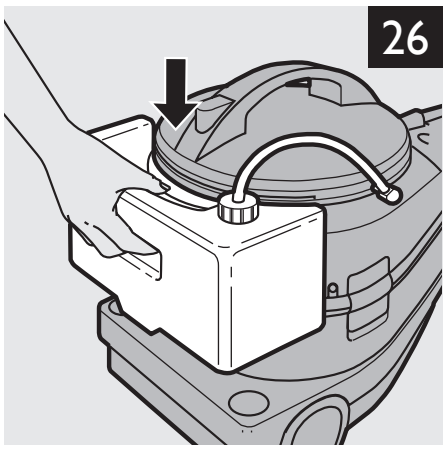
PHILIPS

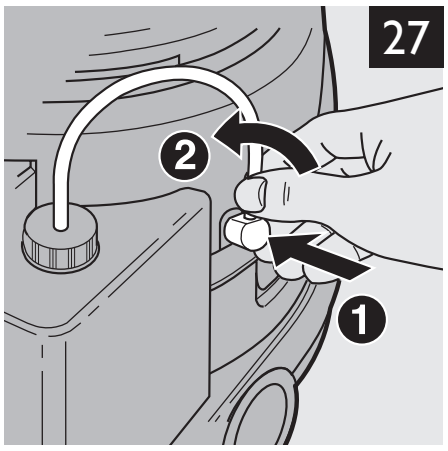

22

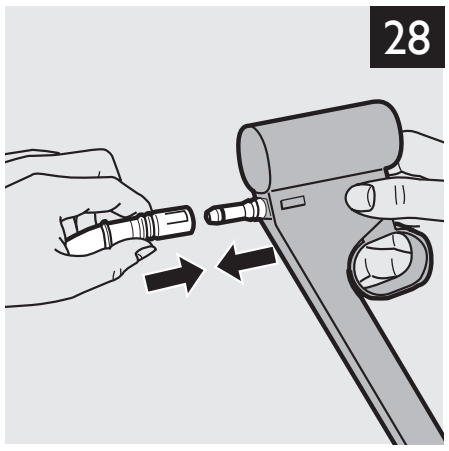

23

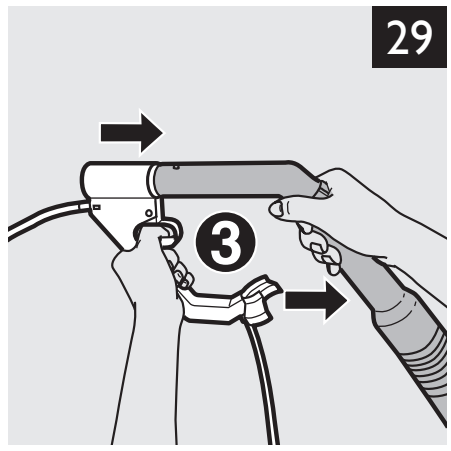

24

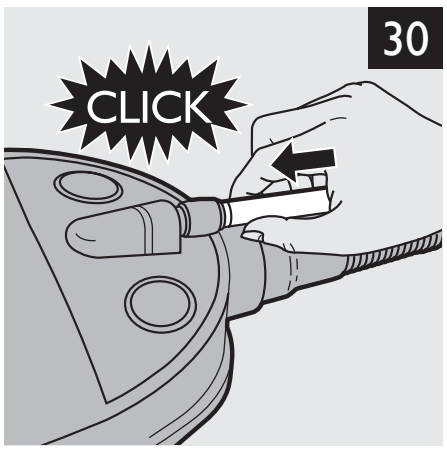

25
1x

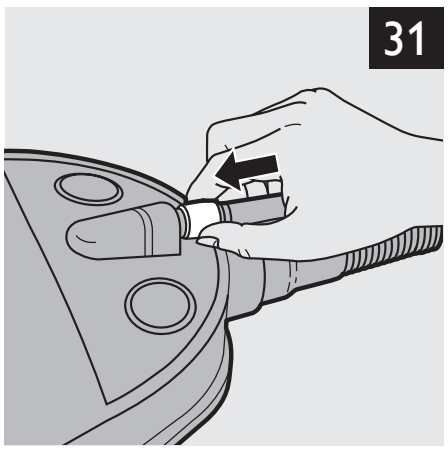

26

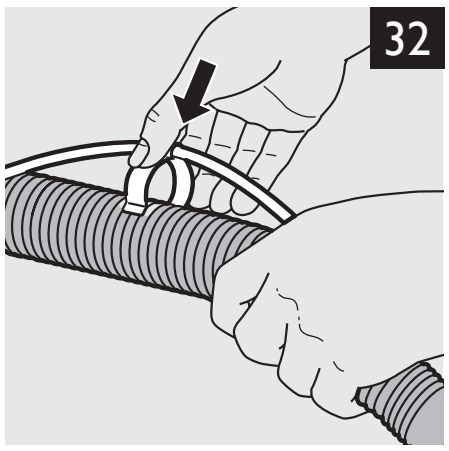

27
2
1

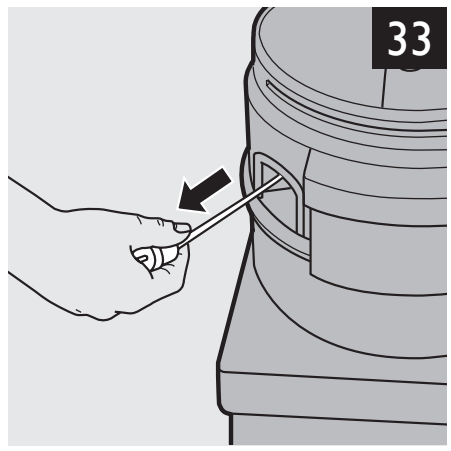

28

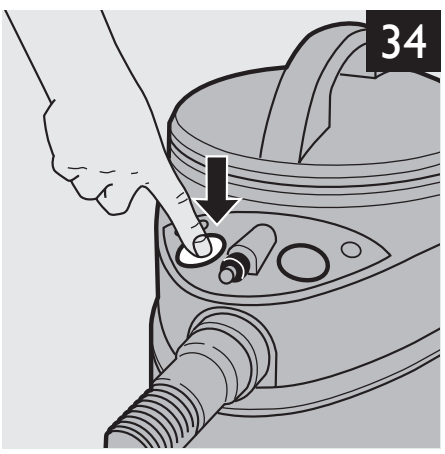

29
3

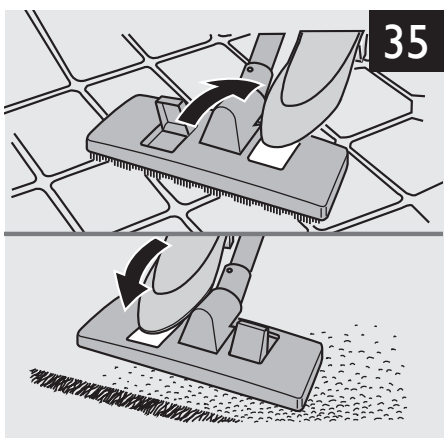

30
CLICK

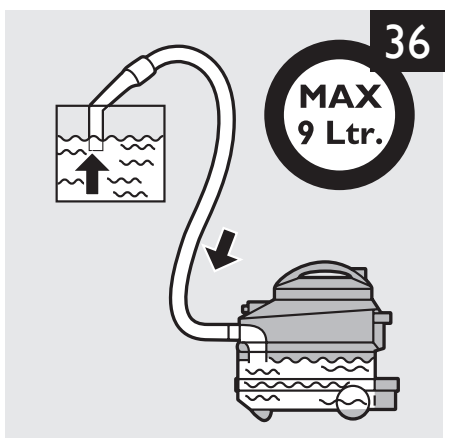

31

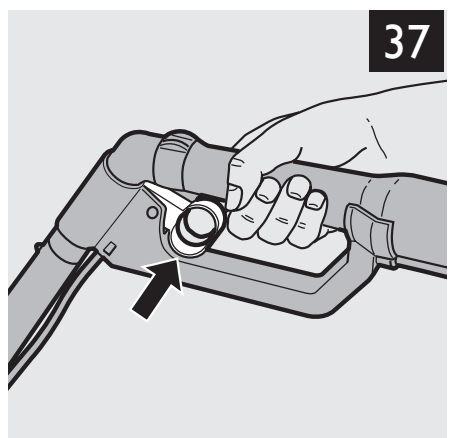

32

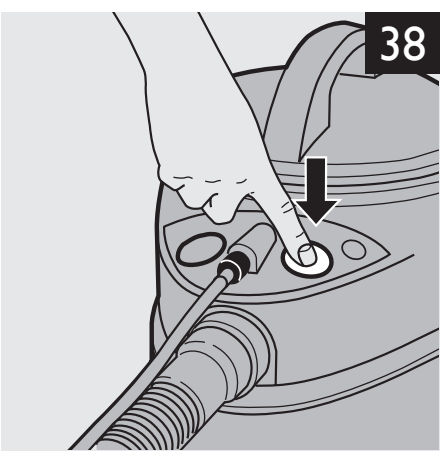

33

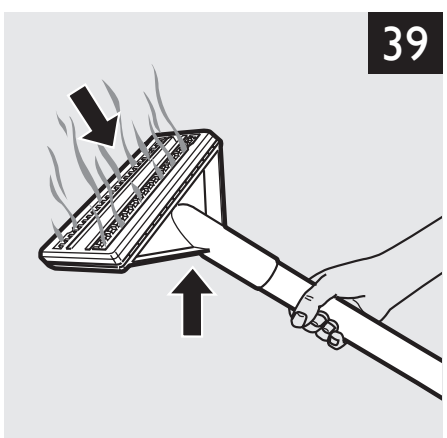

34

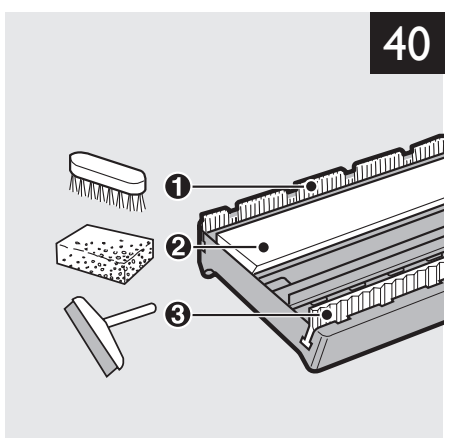

35

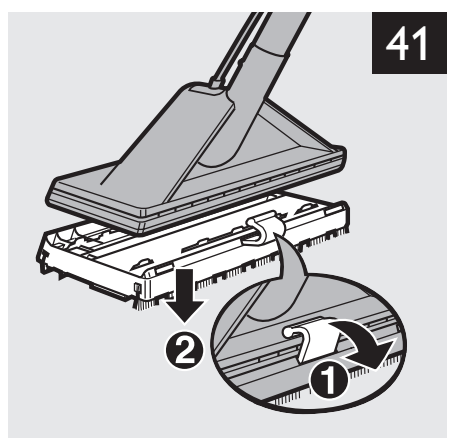

36
MAX
9 Ltr.

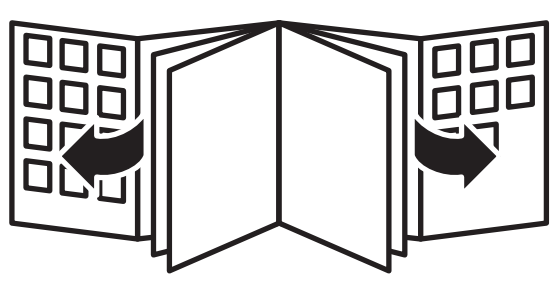

37


38


39

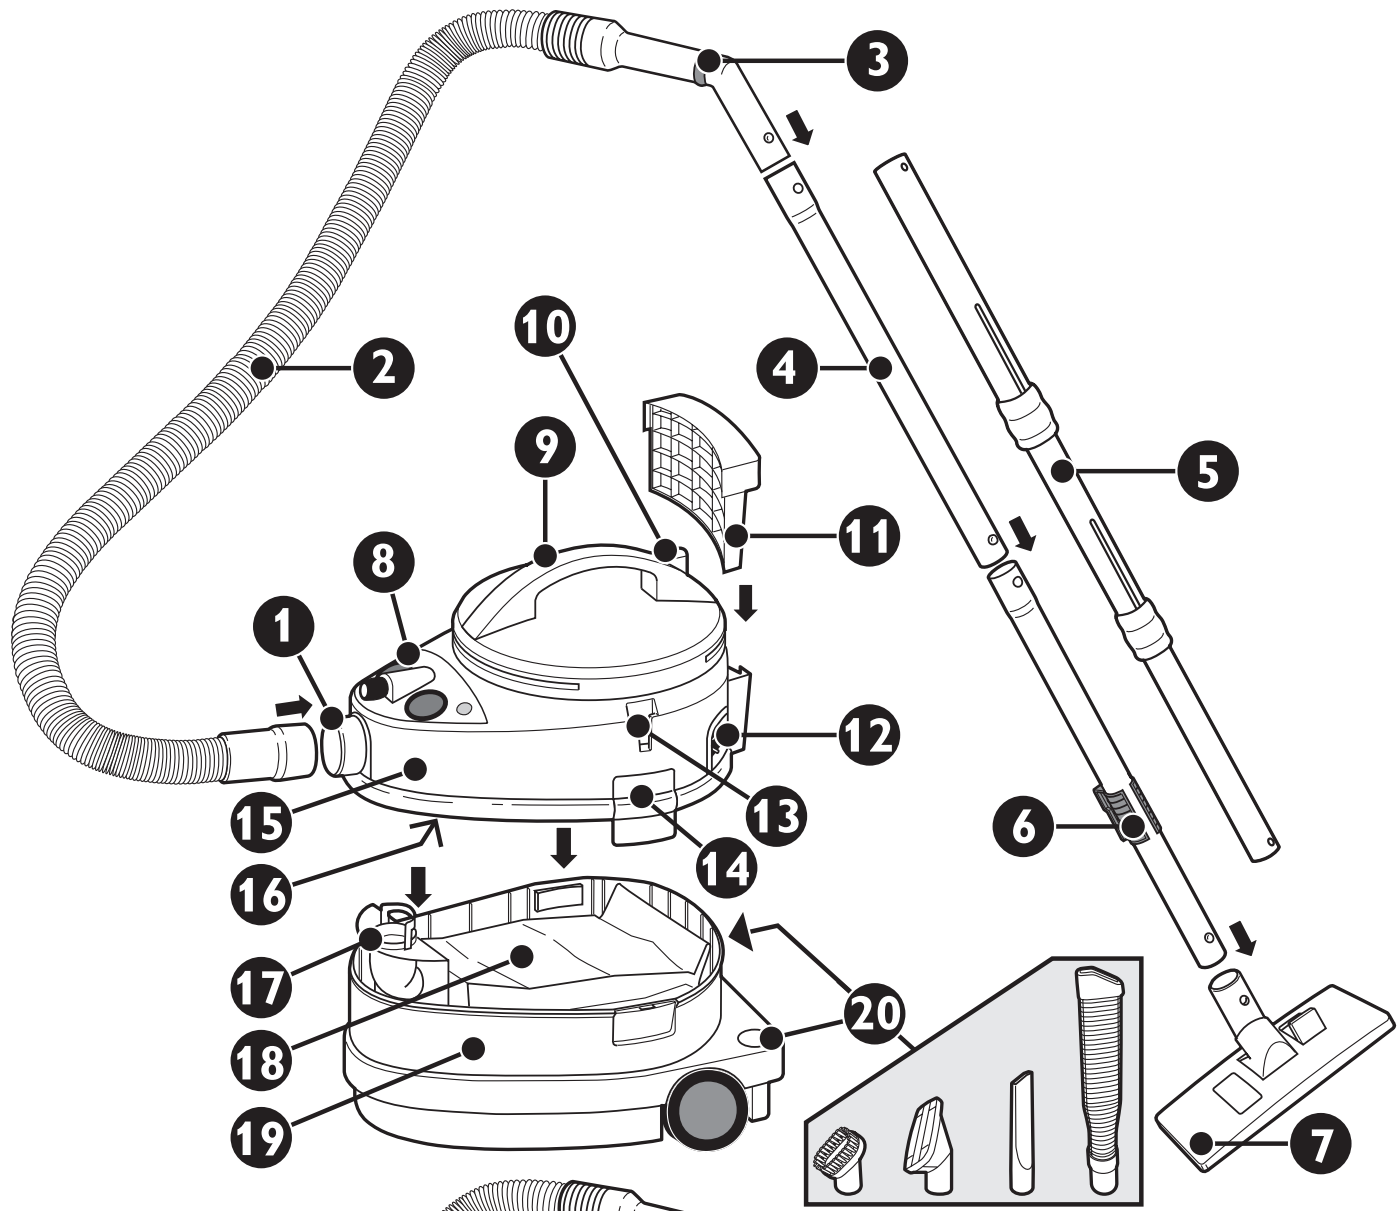

40
1
2
3


41
2
1

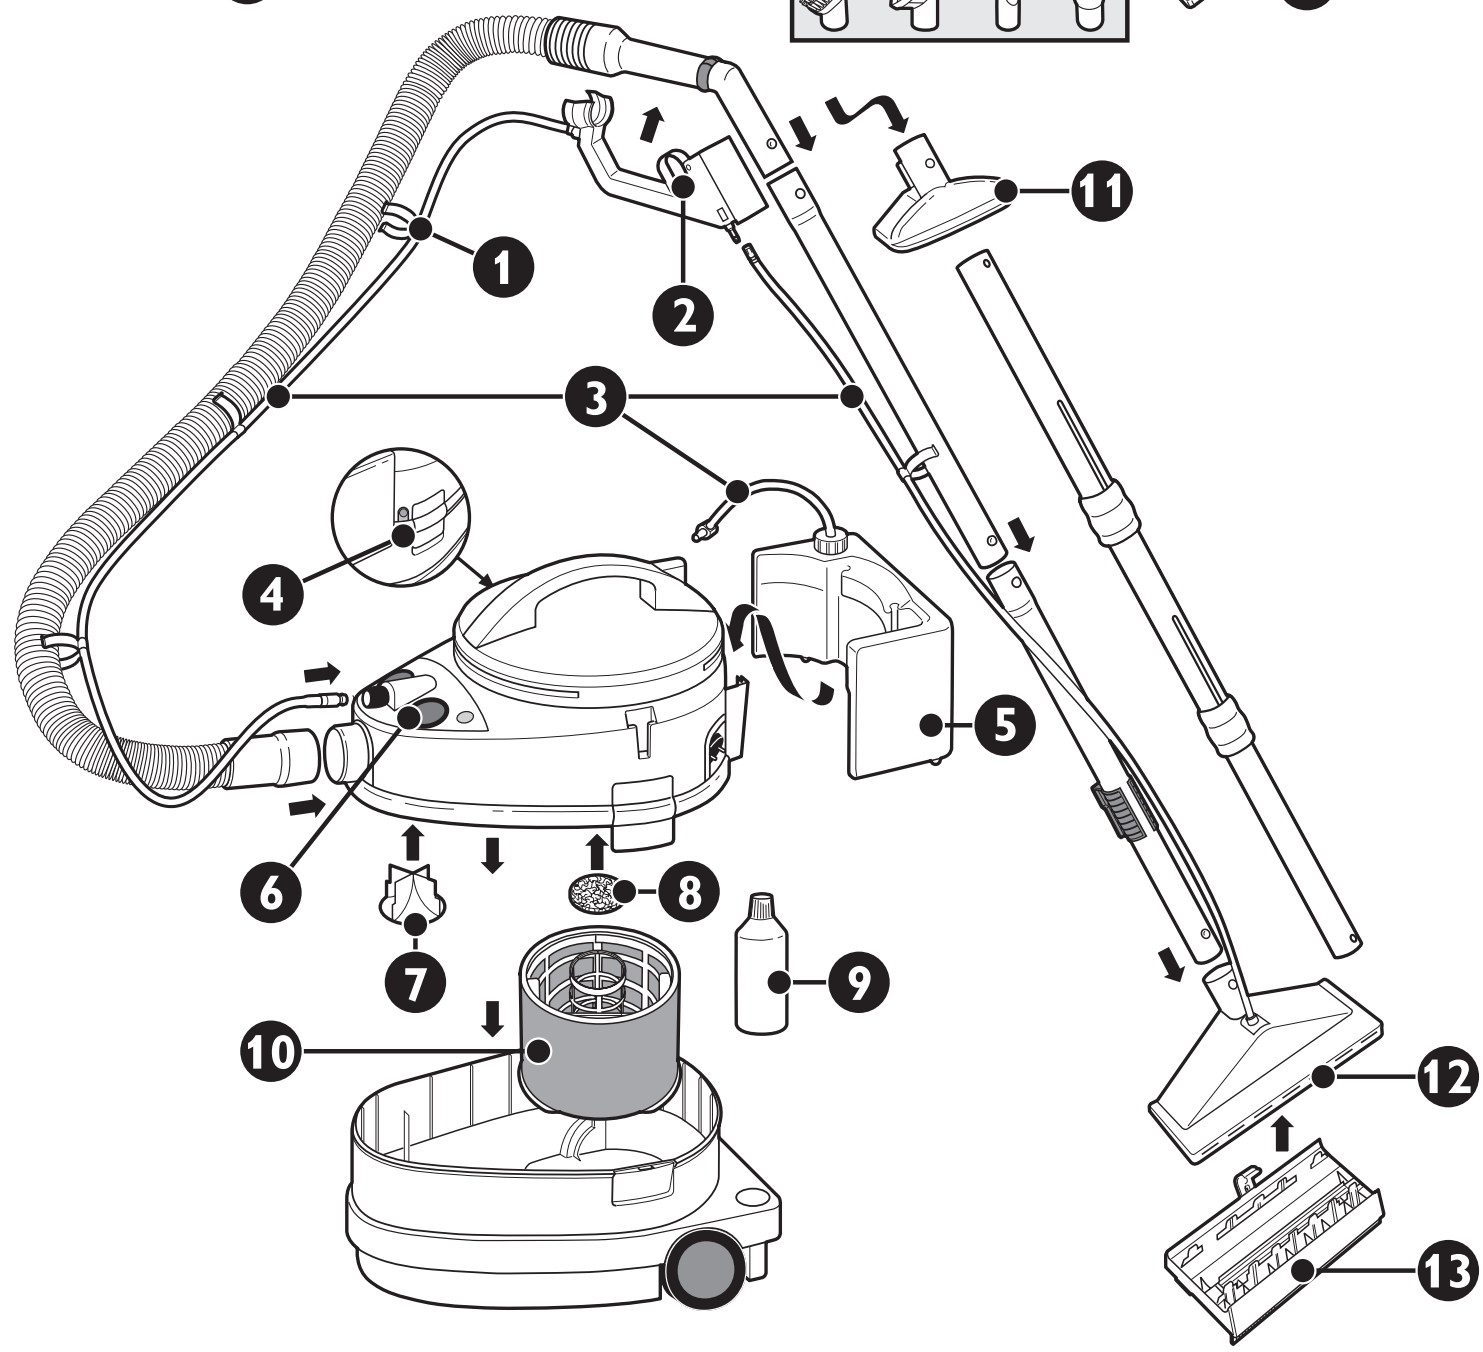


1

A



B



Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

A Dry use
- **1** Hose connector
- **2** Suction hose
- **3** Mechanical suction power control
- **4** Suction tube
- **5** Tri-Scopic tube (specific types only)
- **6** Parking clip (specific types only)
- **7** Nozzle
- **8** Motor on/off button
- **9** Handle
- **10** Cord rewind button
- **11** Micro filter (specific types only)
- **12** Mains cord
- **13** Parking slot
- **14** Clamps
- **15** Motor unit
- **16** Type plate
- **17** Dustbag holder
- **18** Dustbag
- **19** Container
- **20** Storage facility for 2 small accessories (small brush, small nozzle, crevice nozzle or flexible crevice nozzle)

B Wet use
- **1** Shampoo hose clips
- **2** Shampoo trigger
- **3** Shampoo hoses
- **4** Shampoo hose connectors
- **5** Shampoo reservoir
- **6** Shampoo pump on/off button with light
- **7** Diffuser
- **8** Motor protection filter
- **9** Philips cleaning liquid (HR6965)
- **10** Float unit with foam filter
- **11** Upholstery nozzle
- **12** Double-injection shampoo nozzle
- **13** Hard floor adapter

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger
- Never vacuum ashes (from ashtrays and fireplaces) until they are completely cold.
- Never vacuum petrol, white spirit, gas oil, paraffin oil or other flammable or explosive liquids.
- Do not use the appliance in rooms with explosive vapours (petrol, thinners, solvents).
- Never immerse the motor unit in water.
- Never direct the jet of shampoo at plugs, sockets or electrical appliances.

Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance. You can find the type plate on the bottom of the motor unit.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the leaning liquid out of the reach of children.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and the vacuum cleaner is switched on.
- Do not insert the mains plug into the wall socket until the appliance is completely ready for use. Make sure that your hands and the mains plug are dry when you connect or disconnect the appliance.

Caution

- Always remove the micro filter and the paper or reusable dustbag (some countries only) before wet use.
- Always install the diffuser and the float unit before you use the appliance to vacuum liquids.
- Always remove the mains plug from the wall socket if the appliance does not function properly, before you clean the appliance and before you open the container.
- When you use the vacuum cleaner to vacuum ashes, fine sand, lime, cement dust and similar substances, the pores of the dustbag become clogged. As a result, the dustbag-full indicator will indicate that the dustbag is full. Replace the disposable dustbag or empty the reusable dustbag (some countries only), even if it is not full yet (see chapter 'Replacement').
- Only use Philips Athena paper dustbags or the reusable dustbag (some countries only).
- Never use the appliance without the motor protection filter. This could damage the motor and shorten the life of the appliance.
- Always empty, clean and dry the container after wet use. Let the appliance suck in dry air for a few minutes to dry the inside of the tube and hose. This prevents an unpleasant smell the next time you use the vacuum cleaner. It also prevents the paper dustbag from becoming wet
- Only vacuum dry materials and dust if the paper or reusable dustbag (some countries only) is in the appliance.
- Only switch on the pump when you have filled the shampoo reservoir, placed it into the appliance and connected it with the two shampoo hoses. Switch off the pump as soon as the shampoo reservoir is empty. The pump may get damaged if it runs dry.
- To extend the life of the shampoo pump, clean it with a mixture of water and white vinegar once a year. Follow the instructions in chapter 'Cleaning and maintenance'.
- Always switch off the appliance after use and remove the mains plug from the wall socket.
- Do not store the appliance at temperatures below 0°C to prevent it from freezing.
- Noise level: Lc = 82 dB [A]

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

Connecting and disconnecting accessories

Hose

1 To connect the hose, insert it into the hose connector while you turn it clockwise a little (Fig. 2).

2 To disconnect the hose, pull it out of the hose connector while you turn it anticlockwise a little (Fig. 3).

Tube

1 To connect the tube, press the spring-loaded button and insert the narrow section into the wider section. (Fig. 4)
- The button pops up when it is inserted properly into the opening.

2 To disconnect the tube, press the spring-loaded button and pull the sections away from each other.

Tri-Scopic tube (specific types only)

1 Adjust the tube to the length you find most comfortable during vacuum cleaning. Press one of the two collars downwards and pull the tube part above the collar upwards or push it downwards (Fig. 5)

Nozzle

1 Connect the nozzle to the tube (Fig. 6).

2 If you want the nozzle close at hand (e.g. to clean stairs, upholstery or tapestries), connect the nozzle directly to the handgrip (Fig. 7).

Prepare the vacuum cleaner for either dry or wet use.

Note: When you unpack the appliance, it is ready for wet use.

Preparing for dry use

Always remove the float unit and the diffuser and insert the micro filter (specific types only) and the paper or reusable dustbag (some countries only) before you vacuum dry substances.

1 Make sure the appliance is unplugged.

2 Turn the shampoo hose clockwise (1) and pull it out of the motor unit (2) (Fig. 8).

3 Remove the shampoo reservoir (Fig. 9)

4 Undo the clamps (Fig. 10).

5 Lift the motor unit from the container by the handle (Fig. 11).

6 Turn the motor unit upside down (Fig. 12).

7 Remove the diffuser from the motor unit (Fig. 13).

8 Remove the float unit from the container (Fig. 14).

9 Insert a paper dustbag or the reusable dustbag (some countries only). Press and hold the red lever while you place the front of the dustbag into the holder (Fig. 15).

10 First insert the bottom edge (1). Then press the top edge into place (2) (Fig. 16).

Note: Make sure that the two projections of the front point downwards and that the centre of the bottom edge rests on the ridge of the holder.

11 Slide the holder with dustbag into the appliance in such a way that the holder is kept in place by the two ridges in the container (Fig. 17).

12 Put the motor unit back into the container and close the clamps ('click'). (Fig. 18)

13 Put the micro filter into place (specific types only) (Fig. 19).

Note: See chapter 'Replacement' for replacing the paper dustbag or chapter 'Cleaning and maintenance' for emptying the reusable dustbag (some countries only).

Preparing for wet use

Always remove the paper or reusable dustbag (some countries only) and the micro filter (specific types only) before wet use.

Preparing for vacuuming liquids

To vacuum liquids, you need the float unit and the diffuser.

1 Make sure the appliance is unplugged.

2 Undo the clamps (Fig. 10).

3 Lift the motor unit from the container by the handle (Fig. 11).

4 Remove the reusable dustbag (some countries only) or the paper dustbag (see chapter 'Replacement') (Fig. 20).

5 Insert the float unit into the container by its handle (Fig. 21).

Note: The float unit only fits into the appliance in one way.

6 Turn the motor unit upside down (Fig. 12).

7 Insert the diffuser into the motor unit (Fig. 22).

8 Put the motor unit back into the container and close the clamps ('click') (Fig. 18).

9 Remove the micro filter (specific types only) (Fig. 23).

Note: If the micro filter is exposed to excessive air humidity, it loses its electrostatic properties.
Now the appliance is ready for vacuuming liquids.

Preparing for shampooing

To shampoo floors, you need the float unit, the diffuser, the shampoo reservoir (filled with shampoo and water), the double-injection nozzle and the shampoo trigger.

1 Follow steps 1 to 9 in 'Preparing for vacuuming liquids'.

2 Fill the shampoo reservoir with cold water (Fig. 24).

3 Add one measuring cup of cleaning liquid to the full reservoir (Fig. 25).

4 Attach the shampoo reservoir to the appliance (Fig. 26).

5 Insert the short shampoo hose into the connector on the vacuum cleaner (1) and turn it anticlockwise (2) (Fig. 27).

6 Connect the long shampoo hose to the shampoo trigger (Fig. 28).

7 Fasten the shampoo trigger to the handgrip of the suction hose (Fig. 29).

8 Firmly insert the end of the long shampoo hose into the connector on the vacuum cleaner ('click') (Fig. 30).

- To release the shampoo hose, push the ring towards the appliance (Fig. 31).

9 Fasten the long shampoo hose to the suction hose and suction tube with the shampoo hose clips (Fig. 32).

10 Attach the double-injection nozzle (Fig. 6).

The appliance is now ready for shampooing soft floors, such as carpets and rugs.

Using the appliance

1 Pull the mains cord out of the appliance and insert the mains plug into the wall socket (Fig. 33).

2 Press the motor on/off button to switch on the appliance (Fig. 34).

Dry use

Convertible nozzle

1 You can use the convertible nozzle to vacuum hard and soft floors: (Fig. 35)

- With the brush strip folded out, you can use the nozzle to clean hard floors (wooden, ceramic, stone and synthetic floors)
- With the brush strip folded in, you can use the nozzle to clean soft floors (carpets and rugs)

Wet use

Vacuuming liquids

Note: When you vacuum water from a place that is located higher than the appliance itself (e.g. a roof gutter or roof water tank), the appliance inevitably functions as a syphon. As a result, the container fills up more quickly than usual and may overflow. Make sure you never exceed the maximum capacity of the container (9 litres/2 gallons) (Fig. 36).

To make sure that the container does not overflow when you vacuum liquids, perform the following procedure at regular intervals:

1 Lift the nozzle out of the water.

2 Press the motor on/off button to switch off the appliance.

3 Remove the mains plug from the wall socket.

4 Empty the container.

Shampooing carpets

1 Start as far away from the door as possible and then work your way towards the door.

2 Apply shampoo by squeezing the trigger on the handgrip of the tube (Fig. 37).

3 Make overlapping strokes to cover the entire area to be cleaned.

Note: If there are still traces of liquid on the area you have just cleaned, pass the vacuum cleaner over this area once more without applying shampoo.

4 After shampooing, release the trigger and switch off the pump. Keep the appliance switched on (Fig. 38).

5 Lift the nozzle off the floor. Then simply let the appliance suck in dry air for some time to dry the inside of the suction hose and tube (Fig. 39).

6 Switch off the appliance.

Carpet shampooing techniques

Depending on the degree of soiling, you can use (and combine!) the following three carpet shampooing techniques.

1 Freshening up

- If the carpet (or part of it) merely requires freshening up, you do not need to apply a lot of shampoo.
- It is probably sufficient to only apply shampoo when you make the first stroke towards you.
- Then release the trigger and move the nozzle over the cleaned area a few times without applying shampoo.

2 Deep cleaning

- For thorough cleaning of a very dirty carpet or part of a carpet, move the nozzle over the area to be cleaned a few times while you apply shampoo.

3 Extra thorough cleaning

- For extra thorough cleaning of badly soiled areas or stubborn stains, switch off the motor but keep the pump running.
- Squeeze the trigger to apply shampoo.
- Allow the shampoo to act on the area for several minutes before you switch on the motor again to suck up the shampoo.
- Be careful not to apply too much shampoo, as this may damage the carpet.

Carpet shampooing tips

- Never shampoo floors that are not water-resistant. If you are in doubt, contact the supplier of the carpet.
- Do not shampoo delicate fabrics and handwoven or non-colourfast carpets.
- Test the colourfastness of your carpet by pouring some shampoo dissolved in water onto a white cloth. Then rob the cloth onto a normally hidden part of the carpet. If there are no traces of dye on the cloth, the carpet is probably colourfast.
- However, if dye comes off onto the cloth, do not shampoo the carpet. If you are in doubt, contact a specialist.
- Vacuum the whole area thoroughly before you start shampooing.
- Make sure that the room is well-aired during and after shampooing to allow better and quicker drying.
- Allow the carpet to dry well before walking on it again: freshened-up areas normally require 30 minutes to dry, whereas deep-cleaned sections require approximately 2 hours to dry. Of course, the drying times also depend upon the amount of shampoo applied, temperature, air humidity and ventilation.
- The transparent nozzles (the double-injection nozzle and the upholstery nozzle) let you determine if the carpet or hard floor is clean. Simply look at the colour of the extracted solution.

Shampooing hard floors

- The 3-purpose click-on hard floor adapter for the double-injection nozzle consists of three familiar cleaning tools: (Fig. 40)

1 a brush to release sticky dirt from the floor;
2 a sponge to release, distribute and rub in the shampoo;
3 a squeegee to collect the shampoo from the floor so that it can be vacuumed.

1 Snap the hard floor adapter onto the double-injection shampoo nozzle (Fig. 41).

2 Start as far away from the door as possible and then work your way towards the door.

3 Apply shampoo by squeezing the trigger on the handgrip of the tube. To scrub effectively, just make back-and-forth strokes as you do with a regular vacuum cleaner. Normally it is sufficient to only apply shampoo while you move the nozzle forwards (Fig. 42).

Note: Do not make very long strokes.

4 To dry the floor, just move the nozzle backwards slowly. Make sure that only the squeegee touches the floor and do not apply shampoo (Fig. 43).

5 To remove shampoo effectively, make overlapping strokes and finish off with one stroke across as shown in the figure. (Fig. 44)

6 After shampooing, release the trigger and press the shampoo pump on/off button to switch off the pump. Keep the appliance itself switched on (Fig. 38).

7 Lift the nozzle off the floor. Then simply let the appliance suck in dry air for some time to dry the inside of the suction hose and tube (Fig. 39).

8 Press the motor on/off button to switch off the appliance.

Shampooing furniture

The upholstery nozzle allows you to shampoo furniture, tapestries, curtains etc.

1 Attach the upholstery nozzle directly to the handgrip (Fig. 45).

2 Shampoo the fabric in the same way as described for floors. (Fig. 46)

Cleaning

1 Press the motor on/off button to switch off the appliance.

2 Remove the mains plug from the wall socket.

3 You can clean all parts of the appliance, including the container, with a damp cloth.

Make sure no water enters the motor unit!

After wet vacuum cleaning

1 Empty, clean and dry the container.

2 Let the appliance suck in dry air for a few minutes to dry the inside of the tube and hose.

Float unit and foam filter

1 Rinse the float unit and the foam filter (Fig. 47).

2 To guarantee an optimal lifetime for the foam filter, carefully remove it from the float unit (Fig. 48).

3 Clean the filter separately (Fig. 49).

Squeeze the foam filter to remove excess water. Do not wring it!

Double-injection nozzle

1 Rinse the double-injection nozzle under the tap (Fig. 50).

2 Remove the hard floor adapter and clean it separately (Fig. 41).

3 Fill the container with lukewarm fresh water. Pump out the water through the two shampoo hoses into a sink or toilet. This prevents shampoo residues from caking the inside of the hoses and clogging them up.

Shampoo pump

To extend the lifetime of the shampoo pump, clean it with a mixture of water and white vinegar once a year.

1 Pour 1 litre of white vinegar (8% acetic acid) into the shampoo reservoir and top it up with lukewarm fresh water.

2 Let the appliance run in shampooing mode until the shampoo reservoir is empty. Collect the vinegar solution in a bucket.

3 Repeat this procedure with 1 litre of fresh water to rinse out any vinegar residues.

Motor protection filter

If you use the reusable dustbag, clean the motor protection filter once a year in lukewarm water.

Note: If you use paper dustbags, replace the motor protection filter when you insert the first of a new set of paper dustbags (see chapter 'Replacing filters', section 'Motor protection filter').

1 Remove the motor protection filter (Fig. 51).

2 Rinse the motor protection filter under the tap (Fig. 52).

3 Let the motor protection filter dry.

Make sure the filter is completely dry before you reinsert it into the vacuum cleaner.

4 Put the motor protection filter back into place.

Replacing/emptying the dustbag

Replacing the paper dustbag

1 To remove a full dustbag, lift the holder with the dustbag out of the appliance by the grips (Fig. 20).

2 Press and hold the red lever to release the cardboard front of the dustbag (Fig. 53).

3 Throw away the full dustbag and insert a new one (see chapter 'Preparing for use').

Note: A new motor protection filter and a new micro filter are provided with each set of original Philips Athena paper dustbags.

Emptying the reusable dustbag (some countries only)

In some countries a reusable dustbag is provided. You can use the reusable dustbag instead of paper dustbags. The reusable dustbag can be used and empties repeatedly.

1 To remove the reusable dustbag, follow the instructions for removing paper dustbags.

2 Hold the reusable dustbag over a dustbin (Fig. 54).

3 Slide the sealing clip off the dustbag sideways (Fig. 55).

4 Empty the dustbag into the dustbin (Fig. 56).

5 Close the dustbag by sliding the sealing clip back onto the bottom edge of the dustbag. (Fig. 57)

6 Put the reusable dustbag back into the appliance. Follow the instructions for inserting paper dustbags in chapter 'Preparing for use'.

Replacing filters

Only use the original Philips filters specially intended for this appliance. Do not use any other filters. See chapter 'Ordering accessories and filters' for type numbers.

Motor protection filter

Replace the motor protection filter when you insert the first of a new set of paper dustbags.

Note: If you use the reusable dustbag instead of paper dustbags, clean the motor protection filter once a year (see chapter 'Cleaning', section 'Motor protection filter').

1 Remove the old motor protection filter (Fig. 51).

2 Insert the new motor protection filter.

Never use the appliance without the motor protection filter.

Micro filter (specific types only)

When you vacuum dry substances, the electrostatic micro filter purifies the exhaust air by removing minuscule dust particles. The effectiveness of the filter decreases gradually during use.

- Normally it suffices to replace the micro filter when you insert the first of a new set of paper dustbags.
- The indicator of the micro filter holder has to stay white. If the filter has turned noticeably grey, we advise you to replace the filter (Fig. 58).

Replace the filter more frequently if you suffer from a respiratory tract disease (e.g. asthma) or if you have an allergy (e.g. for pollen, dust, etc.).

1 Pull the micro filter holder upwards (Fig. 23).

2 Pull the old micro filter out of the holder (Fig. 59).

3 Put the new micro filter in the holder and slide the holder back into the appliance.

Foam filter

Replace the foam filter if it is damaged or very dirty.

Storage

1 Switch off the appliance and remove the mains plug from the wall socket.

2 Press the cord rewind button. (Fig. 60)

◗ The mains cord is wound up automatically inside the appliance.

Note: When the shampoo reservoir is attached to the appliance, the mains cord does not disappear completely into the appliance when you press the cord rewind button.

3 Store the small nozzles in the way that is shown in the figure (Fig. 61).

4 Specific types only: to park the tube, insert the parking clip into the parking slot on the side of the appliance.

Note: To avoid accidental damage to the appliance, the parking clip comes off the tube or the appliance when the tube is pulled or knocked fiercely. You can simply snap the parking clip back onto the tube when this happens.

Ordering accessories and filters

Accessories, dustbags and filters are available from your dealer. Please mention the appropriate type or service number that is listed in the table below.

Accessory, filter or dustbag	Application	Description	Type number (service no.)
Dustbags, type Athena	2-layer paper dustbags for normal house dust. Dry use.	Set: 4 dustbags + 1 motor protection filter + 1 micro filter.	HR6947
Micro filter	Filters the exhaust air. Dry use.	Set: 2 pcs	FC8032
Cleaning liquid	For shampooing floors. Add to water. Wet use.	1 bottle	HR6965

Accessory, filter or dustbag	Application	Description	Type number (service no.)
Foam filter	To be placed on float unit. Wet use.	1 filter	(4822480 40242)
3-purpose hard floor adapter	For cleaning hard floors. Wet use.	1 adapter	(4322 004 22790)
Upholstery nozzle	For shampooing furniture, tapestries, etc. Wet use.	1 nozzle	(4822 479 20234)
Diffuser	Shampooing, vacuuming liquids. Wet use.	1 diffuser	(4822 466 62588)
Reusable dustbag	For normal house dust. Dry use.	1 dustbag	(4322 480 10215)

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at **www.philips.com** or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

سفارش دادن لوازم جانبی و فیلترها

لوازم، کیسه های جارو و فیلترها نزد فروشنده تان موجود می باشند. لطفاً مدل مربطه یا شماره سرویس خود که در جدول زیر لیست شده است را ذکر کنید.

لوازم، فیلتر یا کیسه جارو	کاربرد	شرح	شماره مدل (شماره سرویس
کیسه جاروی– مدل Athena	کیسه دارای کاغذ ۲ لایه برای گرد و خاک خانگی. استفاده در حالت خشک.	سری: ۴ کیسه جارو + ۱ فیلتر حفاظت موتور + ۱ فیلتر میکرو.	HR6947
میکرو فیلتر	هوای خروجی را فیلتر می کند. استفاده در حالت خشک.	سری: ۲ عدد	FC8032
مایع تمیز کننده	برای شامپو زدن کف آب اضافه شود. استفاده در حالت خیس.		۱ بطری HR6965
فیلتر کف	برای قرار دادن در واحد شناور استفاده در حالت خیس.	۱ فیلتر	(4822 480 40242)
آداپتور سه منظوره کف سخت	برای تمیز کردن کفهای سخت. استفاده در حالت خیس.	۱ آداپتور	(4322 004 22790)
دهانك مبل	برای شامپو زدن مبلمان، پرده ها و غیره. استفاده در حالت خیس.	۱ دهانك	(4822 479 20234)
پخش کننده	شامپو زنی، مکش مایعات. استفاده در حالت خیس.	۱ پخش کننده	(4822 466 62588)
کیسه قابل استفاده مجدد	برای گرد و خاك عادی خانگی. استفاده در حالت خشك.	۱ کیسه دائمی	(4322 480 10215)

محیط زیست

- دستگاه را مانند سایر زباله های خانگی دور نریزید، و آن را در محلهای تعیین شده دور بریزید. با انجام این کار شما به حفظ محیط زیست کمك می کنید.

ضمانت و سرویس

اگر به سرویس یا اطلاعات نیاز داشتید یا اگر با مشکلی روبرو شدید، به سایت اینترنتی Philips به نشانی www.philips.com مراجعه کرده یا با مرکز مراقبت از مشتری Philips در کشور خود تماس بگیرید (این شماره تلفن را در برگه ضمانت جهانی پیدا خواهید کرد). اگر د کشور شما مرکز حمایت از مشتری وجود ندارد به فروشنده لوازم Philips مراجعه کنید.

۶ کیسه را مجددا در داخل دستگاه قرار دهید. دستورالعملهای جا زدن کیسه های کاغذی در فصل "آماده سازی دستگاه برای استفاده" را دنبال کنید.

تعویض فیلترها

فقط از کیسه های اصلی Philips که مخصوص این دستگاه طراحی شده است استفاده کنید. از فیلترهای دیگر استفاده نکنید.
برای شماره مدل به بخش "سفارش دادن لوازم و فیلترها" مراجعه کنید.

فیلتر حفاظت موتور

هنگامی که از سری جدید کیسه های کاغذی استفاده می کنید، فیلتر حفاظت موتور را تعویض کنید.

توجه: اگر از کیسه های قابل استفاده مجدد بجای کیسه های گرد و غبار کاغذی استفاده می کنید، فیلتر حفاظت موتور را سالی یکبار تمیز کنید (به فصل "تمیز کردن"، بخش "فیلتر حفاظت موتور" مراجعه کنید).

۱ فیلتر حفاظت موتور قدیمی را جدا کنید (شکل ۵۱).

۲ فیلتر حفاظت از موتور جدید را جا بزنید.

هرگز از دستگاه بدون فیلتر حفاظت موتور استفاده نکنید.

فیلتر میکرو (فقط مدلهای خاص)

هنگام جارو کردن مواد خشك، میکرو فیلتر الکترواستاتیکی دستگاه هوای خروجی را با زدودن ذرات گرد و غبار ریز موجود در آن، تصفیه می کند. تاثیر این فیلتر در حین استفاده بطور تدریجی کاهش می یابد.

- معمولاً فقط کافی است تا هنگامی که از سری جدید کیسه های کاغذی استفاده می کنید، فیلتر میکرو را تعویض کنید.
- نشانگر نگهدارنده میکرو فیلتر باید سفید مانده باشد. اگر فیلتر بطرز محسوسی خاکستری رنگ شده باشد، توصیه می کنیم که فیلتر را تعویض کنید (شکل ۵۸).

در صورتی که مبتلا به بیماری مجرای تنفسی می باشید (برای مثال، آسم) یا دارای حساسیت (برای مثال، به گرده گیاه، گرد و غبار و غیره) می باشد، فیلتر را سریعتر تعویض کنید.

۱ نگهدارنده میکرو فیلتر را بطرف بالا بکشید (شکل ۲۳).

۲ میکرو فیلتر قدیمی را از نگهدارنده بیرون بکشید (شکل ۵۹).

۳ میکرو فیلتر جدید را درون نگهدارنده قرار داده و نگهدارنده را مجددا در دستگاه جا بزنید.

فیلتر کف

فیلتر کف را در صورتی که آسیب دیده باشد یا خیلی کثیف شده باشد، تعویض نمایید.

نگهداری

۱ دستگاه را خاموش کرده و دوشاخه را از پریز خارج کنید.

۲ دکمه جمع کردن سیم را فشار دهید. (شکل ۶۰)

سیم برق بطور اتوماتیك در داخل دستگاه جمع می شود.

توجه: هنگامی که منبع شامپو به دستگاه وصل شده باشد، هنگام فشار دادن دکمه جمع کردن سیم، سیم برق بطور کامل در دستگاه قرار نمی گیرد.

۳ دهانکهای کوچك دستگاه را به روشی که در شکل نمایش داده شده است، نگهداری کنید (شکل ۶۱).

۴ فقط مدلهای خاص: برای جمع آوری لوله، گیره نصب را در شکاف کنار دستگاه جا بزنید.

توجه: برای جلوگیری از آسیب رسانی تصادفی به دستگاه، گیره پارك از لوله جدا خواهد شد یا در صورتی که ضربه محکم به لوله وارد شود یا لوله محکم کشیده شود. فقط کافی است که دوباره گیره نگهداری لوله را در صورت بروز چنین حالتی، روی لوله جا بزنید.

۳ فیلتر را به طور جداگانه تمیز کنید (شکل ۴۹).

فیلتر کف را فشار داده تا آب اضافه آن را بگیرید آن را نپیچانید!

دهانك پاشش دوبل

۱ دهانك پاشیدن دوبل را زیر آب بشویید (شکل ۵۰).

۲ آداپتور کف سخت را باز کرده و آن را جدا تمیز کنید (شکل ۴۱).

۳ محفظه را با آب ولرم تازه پر کنید. آب را از طریق دو شیلنگ شامپو به درون ظرف شویی یا توالت پمپ کنید. این کار از سفت شدن باقیمانده های شامپو در داخل شیلنگها و مسدود شدن شیلنگها جلوگیری بعمل می آورد.

پمپ شامپو

برای افزایش طول عمر پمپ شامپو، آن را یك بار در سال با مخلوطی از آب و سرکه سفید تمیز کنید.

۱ ۱ لیتر سرکه سفید (اسید استیك ۸٪) را در منبع شامپو ریخته و روی آن را تا زمانی که پر شود، آب ولرم تازه بریزید.

۲ اجازه دهید تا دستگاه در حالت شامپو کار کرده تا منبع شامپو خالی شود. محلول سرکه را در یك سطل جمع کنید.

۳ این کار را با ۱ لیتر آب تازه تکرار کنید تا اثر هر گونه سرکه در دستگاه شسته شود.

فیلتر حفاظت موتور

اگر شما از کیسه های دائمی استفاده می کنید، فیلتر حفاظت موتور را یکبار در سال با آب ولرم تمیز کنید.

توجه: اگر از کیسه های گرد و غبار کاغذی استفاده می کنید، فیلتر حفاظت موتور را هنگام جا زدن اولین کیسه گرد وغبار کاغذی جدید، تعویض کیند (به فصل "تعویض فیلترها"، بخش "فیلتر حفاظت موتور" مراجعه کنید).

۱ فیلتر حفاظت موتور را جدا کنید (شکل ۵۱).

۲ فیلتر حفاظت موتور را زیر آب بشویید (شکل ۵۲).

۳ بگذارید تا فیلتر حفاظت موتور خشك شود.

قبل از جا زدن دوباره فیلتر در جاروبرقی، مطمئن شوید که فیلتر کاملاً خشك می باشد.

۴ فیلتر حفاظت موتور را مجددا در سر جای خود قرار دهید.

تعویض/تخلیه کیسه جارو

تعویض کیسه گرد وغبار کاغذی

۱ برای در آوردن کیسه جاروی پر شده، نگهدارنده و کیسه را با استفاده از دستگیره ها از روی دستگاه بلند کنید.

۲ اهرم قرمز را فشار داده و نگاه دارید تا مقوای جلوی کیسه جارو آزاد شود (شکل ۵۳).

۳ کیسه پر شده را دور ریخته و یك کیسه جدید در دستگاه قرار دهید (به فصل "آماده سازی دستگاه برای استفاده" مراجعه کنید).

توجه: یك فیلتر حفاظت موتور و یك فیلتر میکرو جدید با هر سری از کیسه جاروهای کاغذی اصلی Philips Athena ارائه شده است.

کیسه جاروی دائمی (فقط کشورهای خاص)

در برخی از کشورها کیسه گرد و غبار قابل استفاده مجددا ارائه شده است. می توانید بجای کیسه های کاغذی از کیسه های قابل استفاده مجدد استفاده کنید. کیسه قابل استفاده مجدد را می توان بطور مکرر استفاده و تخلیه نمود.

۱ برای جدا کردن کیسه دائمی، دستورالعملهای خارج کردن کیسه های کاغذی را دنبال کنید.

۲ کیسه دائمی را روی یك سطل زباله نگه دارید (شکل ۵۴).

۳ گیره را از با فشار دادن بکنار از کیسه جدا کنید (شکل ۵۵).

۴ کیسه گرد و غبار را در سطل تخلیه کنید (شکل ۵۶).

۵ کیسه را با حرکت دادن گیره آن به لبه انتهای کیسه، ببندید. (شکل ۵۷)

- قبل از راه رفتن روی فرش، اجازه دهید تا فرش کاملاً خشك شود. مناطقی که گردگیری شده اند معمولا به ۳۰ دقیقه زمان برای خشك شدن نیاز دارند، در حالیکه مناطقی که بطور عمیق تمیز شده اند برای خشك شدن، حدود ۲ ساعت زمان نیاز دارند. البته، زمان خشك شدن به مقدار شامپوی استعمال شده، درجه حرارت، رطوبت هوا و تهویه محل هم بستگی دارد.
- دهانکهای شفاف (دهانك پاشش دوبل و دهانك مبل) به شما اجازه می دهند تا تمیز بودن فرش یا کف را بررسی کنید. فقط کافی است تا رنگ محلول مکیده شده را نگاه کنید.

شامپو زنی کفهای سخت

- آداپتور کف سخت سه منظوره مخصوص دهانك پاشش دوبل متشکل از ۳ ابزار مشابه تمیز کاری می باشد: (شکل ۴۰)

۱ يك عدد برس برای جدا کردن کثیفی چسبناك از کف اتاق؛

۲ يك ابر برای ریختن، پخش کردن و مالیدن شامپو؛

۳ يك کف شور برای جمع کردن شامپو از کف تا جارو بتواند آن را مکش کند.

۱ آداپتور کف سخت را روی دهانك شامپوی پاشش دوبل نصب کنید (شکل ۴۱).

۲ تا آنجا که می توانید از در فاصله گرفته و سپس کار خود را از انتها بطرف در ادامه دهید.

۳ شامپو را با فشار دادن ماشه در روی دسته لوله، روی فرش بریزید. برای تمیز کردن مؤثر، کافی است تا حرکتهای روی به عقب و جلو درست مانند کاری که با يك جارو برقی معمولی انجام می دهید، انجام دهید. معمولاً اگر شامپو را در حرکت رو به جلو استعمال کنید، برای تمیز کردن کافی خواهد بود (شکل ۴۲).

توجه: حرکتهای بیش از حد طولانی را انجام ندهید.

۴ برای خشك کردن کف، فقط کافی است که دهانك را به آهستگی رو به عقب حرکت دهید. مطمئن شوید که فقط کف شور دستگاه با کف در تماس بوده و شامپو بکار گرفته نمی شود (شکل ۴۳).

۵ برای پاك کردن شامپو بطور مؤثر، حرکتهای هم پوش انجام داده و هر حرکت را بنحوی که در تصویر نمایش داده شده است به پایان برسانید. (شکل ۴۴)

۶ بعد از شامپو زدن، ماشه را رها کنید و دکمه روشن/خاموش کردن پمپ شامپو را برای خاموش کردن پمپ فشار دهید. دستگاه را روشن نگاه دارید (شکل ۳۸).

۷ دهانك را از روی کف بلند کنید. سپس فقط کافی است که دستگاه هوای خشك را برای مدتی به داخل بکشد تا درون شیلنگ و لوله مکش خشك شود (شکل ۳۹).

۸ دکمه روشن/خاموش دستگاه را برای خاموش کردن دستگاه فشار دهید.

شامپو زدن مبلمان

دهانك مبل به شما اجازه می دهند تا مبلمان، توریها و پرده ها را شامپو بزنید.

۱ دهانك مبل را بطور مستقیم روی دستگیره وصل کنید (شکل ۴۵).

۲ پارچه را مانند روشی که برای کف شرح داده شده، شامپو بزنید. (شکل ۴۶)

تمیز کردن

۱ دکمه روشن/خاموش دستگاه را برای خاموش کردن دستگاه فشار دهید.

۲ دو شاخه برق را از پریز خارج کنید.

۳ می توانید تمام قطعات و بخشهای دستگاه و همچنین ظرف را با يك پارچه نمدار تمیز کنید.

مطمئن شوید که آب وارد واحد موتور نمی شود!

بعد از تمیز کردن جارو برقی

۱ ظرف را تخلیه، تمیز و خشك کنید.

۲ بگذارید تا دستگاه برای چند دقیقه هوای خشك بدرون خود بکشید تا درون لوله و شیلنگ خشك شود.

واحد شناور و فیلتر کف

۱ واحد شناور و فیلتر کف را زیر آب بگیرید (شکل ۴۷).

۲ برای تضمین عمر مفید فیلتر کف، با دقت آن را از واحد شناور جدا کنید (شکل ۴۸).

– هنگامی که نوار برس بطرف داخل قرار گرفته باشد، می توانید از دهانك برای تمیز کردن کفهای نرم (انواع فرش و قالی) استفاده کنید

استفاده در حالت خیس

مکش مایعات

توجه: هنگامی که آب را محلی که بالاتر از دستگاه قرار گرفته است، مکش می کنید (مانند کف شور بام یا مخزن آب پشت بام)، دستگاه درست مانند یك سیفون عمل می کند. در نتیجه، محفظه سریعتر از حد معمول پر شده و ممکن است سرریز کند. مطمئن شوید که هرگز از ظرفیت حداکثر محفظه فراتر نمی روید (۹ لیتر/ ۲ گالن) (شکل ۳۶).

برای اطمینان از اینکه محفظه هنگام جارو کردن مایعات سرریز نمی کند، روش زیر را در فواصل منظم انجام دهید.

۱ دهانك را از آب بیرون بیاورید.

۲ دکمه روشن/خاموش دستگاه را برای خاموش کردن دستگاه فشار دهید.

۳ دو شاخه برق را از پریز خارج کنید.

۴ محفظه را خالی کنید.

شامپو زدن فرشها

۱ تا آنجا که می توانید از در فاصله گرفته و سپس کار خود را از انتها بطرف در ادامه دهید.

۲ شامپو را با فشار دادن ماشه در روی دسته لوله، روی فرش بریزید (شکل ۳۷).

۳ دسته را بنحوی که روی لبه بخش قبلی قرار داشته باشد بکشید تا تمام ناحیه ایی که باید تمیز شود، پوشش داده شود.

توجه: در صورتی که هنوز اثری از مایع روی محلی که تمیز کرده اید وجود داشته باشد، جارو برقی را یکبار دیگر بدون استعمال شامپو روی این ناحیه بکشید.

۴ بعد از شامپو زدن، ماشه را آزاد کرده و پمپ را خاموش کنید. دستگاه را روشن نگاه دارید (شکل ۳۸).

۵ دهانك را از روی کف اتاق بلند کنید. ۵ دهانك را از روی کف اتاق بلند کنید.

۶ دستگاه را خاموش کنید.

تکنیکهای مربوط به شامپو زنی فرش

با توجه به نوع و مقدار خاك، می توانید از سه تکنیك شامپو زنی زیر استفاده کنید (و آنها را با یکدیگر ترکیب کنید!).

۱ تازه کردن

– در صورتی که فرش (یا بخشی از آن) فقط به گردگیری نیاز داشته باشد، لزومی ندارد تا از مقدار زیادی شامپو استفاده کنید.

– شاید فقط نیاز باشد تا از شامپو هنگامی که اولین بار جارو را روی فرش می کشید استفاده کنید.

– سپس ماشه را رها کرده و دهانك را بدون استفاده از شامپو روی ناحیه تمیز شده برای چند بار حرکت دهید.

۲ تمیز کردن عمیق

– برای تمیز کردن کامل فرشی یا بخشی از آن که خیلی کثیف است، دهانك را در حالی که از شامپو استفاده می کنید، روی محلی که باید تمیز شود، چند بار حرکت دهید.

۳ تمیز کردن کامل اضافه

– برای تمیز کردن کامل بیشتر در محلی که بسیار خاکی شده است یا دارای لکه های زیاد می باشد، موتور را خاموش کرده اما پمپ را روشن نگاه دارید.

– ماشه را برای استعمال شامپو، فشار دهید.

– قبل از اینکه موتور را دوباره روشن کنید تا شامپو را بداخل جارو بمکد، اجازه دهید تا شامپو برای چند دقیقه روی محلی که باید تمیز شود قرار گیرد.

– دقت کنید که از شامپوی بیش از حد استفاده نکنید چون این کار می تواند به فرش آسیب رساند.

نکات مربوط به شامپو زنی فرش

– هرگز کفهایی که در برابر آب مقاوم نیستند را شامپو نزنید. در صورتی که در این مورد تردید دارید، با فروشنده فرش تماس بگیرید.

– پارچه های ظریف و دستباف یا فرشهایی که رنگ آنان ثابت نیست را شامپو نزنید.

– ثبات رنگ فرش را با ریختن مقدار شامپوی حل شده در آب بر روی یك تکه پارچه سفید امتحان کنید. سپس پارچه را روی بخشی از فرش که بطور معمول مخفی است، بمالید. در صورتی که اثری از رنگ روی پارچه نباشد، رنگ فرش احتمالاً ثابت است.

– اما، در صورتی که رنگ روی پارچه باشد، فرش را شامپو نزنید. در صورتی که در این مورد تردید دارید، با یك کارشناس تماس بگیرید

– کل محل را قبل از شامپو زدن، بطور کامل جارو بزنید.

– مطمئن شوید که اتاق در حین شامپو زدن و بعد از آن دارای تهویه مناسب می باشد تا فرش بهتر و سریعتر خشك گردد.

آماده ساختن دستگاه برای مکش مایعات

برای مکش مایعات، شما به واحد شناور و پخش کننده نیاز دارید.

۱ مطمئن شوید که دستگاه به برق وصل نمی باشد.

۲ بستها را باز کنید (شکل ۱۰).

۳ واحد موتور را با استفاده از دستگیره از روی محفظه بلند کنید (شکل ۱۱).

۴ کیسه گرد و غبار قابل استفاده (فقط در برخی از کشورها) یا کیسه کاغذی (به فصل "تعویض" مراجعه کنید) (شکل ۲۰).

۵ واحد شناور را با استفاده از دستگیره در محفظه قرار دهید (شکل ۲۱).

توجه: واحد شناور فقط از یك راه در دستگاه قرار می گیرد.

۶ واحد موتور را برعکس کنید (شکل ۱۲).

۷ پخش کننده را در واحد موتور جا بزنید (شکل ۲۲).

۸ واحد موتور را مجدداً روی محفظه قرار داده و بستها را ببندید ("کلیك") (شکل ۱۸).

۹ فیلتر میکرو (فقط مدلهای خاص) را جدا کنید (شکل ۲۳).

توجه: در صورتی که میکرفیلتر در هوای بیش از حد مرطوب قرار بگیرد، خواص الکترواستاتیك خود را از دست خواهد داد.

اکنون دستگاه برای مکش مایعات آماده است.

آماده ساختن دستگاه برای شامپو زنی

برای شامپو زدن کف، شما به واحد شناور، پخش کننده، منبع شامپو (پر شده از شامپو و آب)، دهانك پاشش دوبل و دستگیره شامپو زنی نیاز دارید.

۱ مراحل ۱ تا ۹ در "آماده سازی برای مکش مایعات" را دنبال کنید.

۲ منبع شامپو را با آب سرد پر کنید (شکل ۲۴).

۳ یك پیمانه اندازه گیری از مایع پاك کننده را در منبع بریزید (شکل ۲۵).

۴ منبع شامپو را به دستگاه وصل کنید (شکل ۲۶).

۵ شیلنگ کوتاه شامپو زنی را به اتصال روی جاروبرقی وصل کرده (۱) و آن را مخالف حرکت عقربه های ساعت بچرخانید (۲) (شکل ۲۷).

۶ شیلنگ بلند را به دستگیره شامپو زنی وصل کنید (شکل ۲۸).

۷ دستگیره شامپو زنی را روی دسته شیلنگ مکش محکم کنید (شکل ۲۹).

۸ انتهای شیلنگ بلند شامپو زنی را محکم در اتصال جاروبرقی جا بزنید ("کلیك") (شکل ۳۰).

- برای آزاد کردن شیلنگ شامپو، حلقه را بطرف دستگاه فشار دهید (شکل ۳۱).

۹ شیلنگ بلند شامپو را به شیلنگ مکش و لوله مکش را با بستهای شیلنگ شامپو محکم کنید (شکل ۳۲).

۱۰ دهانك پاشیدن دوبل را وصل کنید (شکل ۶).

اکنون دستگاه برای شامپو زدن کفهای نرم مانند انواع فرش و قالی آماده می باشد.

استفاده از دستگاه

۱ سیم برق را از دستگاه بیرون بکشید و دوشاخه را در پریز دیواری بزنید (شکل ۳۳).

۲ دکمه خاموش/روشن موتور را برای روشن کردن دستگاه فشار دهید (شکل ۳۴).

استفاده در حالت خشك

دهانك قابل تبدیل

۱ می توانید از دهانك قابل تبدیل برای جاروزدن کفهای سخت و نرم استفاده کنید: (شکل ۳۵)

- هنگامی که نوار برس به بالا تا شده باشد، می توانید از دهانك برای تمیز کردن کفهای سخت (چوبی، سرامیك، سنگ، و کفهای مصنوعی) استفاده کنید.

۱ **برای وصل کردن لوله، دکمه فنر دار را فشار داده و بخش باریك را در بخش پهنتر جا بزنید. (شکل ۴)**
دکمه هنگامی که بطرز صحیح در شکاف جا زده شود، بیرون خواهد زد.

۲ **برای جدا کردن لوله، دکمه فنر دار را فشار داده و بخشهای وصل شده به یکدیگر را با کشیدن از یکدیگر جدا کنید.**

لوله تلسکوپی سه تکه (فقط مدلهای خاص)

۱ **لوله را به اندازه طولی که هنگام جارو کردن راحت می باشید تنظیم کنید. یکی از دو لبه را به طرف پایین فشار داده و بخش لوله در بالای لبه را بطرف بالا کشیده یا آن را بطرف پایین فشار دهید (شکل ۵).**

دهانك

۱ **دهانك را به لوله وصل کنید (شکل ۶).**

۲ **اگر می خواهید دهانك در دست رس باشد (برای مثال، برای تمیز کردن پله، مبل یا پرده)، دهانك را بطور مستقیم به دستگیره وصل کنید (شکل ۷).**

جارو برقی را برای استفاده در حالت خشك یا خیس آماده کنید.

توجه: **هنگامی که دستگاه را از جعبه خارج می کنید، دستگاه برای استفاده خیس آماده می باشد.**

آماده ساختن دستگاه برای استفاده خشك

همیشه واحد شناور و پخش کننده را جدا کرده و میکرو فیلتر (فقط مدلهای خاص) و کیسه گرد و خاك کاغذی یا دایمی را قبل از جارو کردن مواد خشك جا بزنید (فقط در برخی از کشورها).

۱ **مطمئن شوید که دستگاه به برق وصل نمی باشد.**

۱ **شیلنگ شامپو را در جهت عقربه های ساعت چرخانده (۱) و آن را از واحد موتور بیرون بکشید (۲) (شکل ۸).**

۳ **منبع شامپو را جدا کنید (شکل ۹)**

۴ **بستها را باز کنید (شکل ۱۰).**

۵ **واحد موتور را با استفاده از دستگیره از روی محفظه بلند کنید (شکل ۱۱).**

۶ **واحد موتور را برعکس کنید (شکل ۱۲).**

۷ **پخش کننده را از واحد موتور جدا کنید (شکل ۱۳).**

۸ **واحد شناور را از محفظه جدا کنید (شکل ۱۴).**

۹ **یك کیسه کاغذی یا کیسه دایمی گرد و غبار را جا بزنید (فقط در برخی از کشورها). در حین قرار دادن کیسه جارو در نگاه دارنده، اهرم قرمز را فشار داده و نگاه دارید (شکل ۱۵).**

۱۰ **ابتدا لبه انتهایی را جا بزنید (۱). سپس لبه بالا را در جای خود قرار دهید (۲) (شکل ۱۶).**

توجه: **مطمئن شوید که دو برآمدگی جلو به طرف پایین قرار گرفته اند و مرکز لبه پایین روی لبه نگه دارنده قرار گرفته است.**

۱۱ **نگه دارنده را همراه با کیسه جارو در دستگاه بنحوی قرار دهید که نگه دارنده با استفاده از دو لبه محفظه در جای خود قرار گیرد (شکل ۱۷).**

۱۲ **واحد موتور را مجدداً روی محفظه قرار داده و بستها را ببندید ("کلیك"). (شکل ۱۸)**

۱۳ **میکروفیلتر را در محل خود قرار دهید (فقط مدلهای خاص) (شکل ۱۹).**

توجه: **به فصل "تعویض" برای تعویض کیسه کاغذی یا فصل "تمیز کردن و نگهداری" برای تخلیه کیسه دائمی مراجعه کنید (فقط در برخی از کشورها).**

آماده ساختن دستگاه برای استفاده در حالت خیس

همیشه میکرو فیلتر (فقط مدلهای خاص) و کیسه کاغذی یا دائمی گرد و غبار را قبل از استفاده در حالت خیس بیرون آورید (فقط برخی از کشورها).

هشدار

- قبل از اتصال دستگاه به برق دقت کنید که ولتاژ مشخص شده روی دستگاه با برق محل هماهنگی داشته باشد. می توانید پلاك مدل را در انتهای واحد موتور پیدا کنید.
- در صورتی که سیم و دو شاخه و یا خود دستگاه آسیب دیده باشد از دستگاه استفاده نکنید.
- اگر سیم برق صدمه دیده است، باید توسط شرکت Philips یا مرکز خدمات مورد تایید شرکت Philips یا افرادی تایید شده دیگری برای اجتناب از ایجاد خطر، تعویض شود.
- این دستگاه برای استفاده اشخاصی که دارای وضعیت ضعیف جسمانی (شامل کودکان)، حساسیت و یا عقب ماندگی ذهنی و یا عدم داشتن تجربه و درك صحیح از آن هستند نمی باشد، مگر اینکه اینگونه اشخاص تحت آموزش و یا سرپرستی توسط افرادی که مسئولیت حفاظت از آنها را دارند در رابطه با این دستگاه قرار داشته باشند.
- کودکان باید در رابطه با این دستگاه تحت مراقبت باشند و مطمئن شوید که با آن بازی نکنند. اجازه ندهید کودکان بدون نظارت از دستگاه استفاده کنند.
- مایع تمیز کننده را از دسترس کودکان دور نگاه دارید.
- هنگامی که جارو برقی روشن می باشد و شیلنگ به جارو وصل شده است، شیلنگ یا ابزار را به طرف چشمان یا گوش نگرفته یا آن را در دهان خود نگذارید.
- دوشاخه برق را تا زمانی که دستگاه بطور کامل برای استفاده آماده نمی باشد در پریز نزنید.
- مطمئن شوید که دستان و دوشاخه برق هنگام وصل کردن و جدا کردن دستگاه از برق، خشك می باشند.

احتیاط

- همیشه میکرو فیلتر و کیسه کاغذی یا دائمی گرد و غبار را قبل از استفاده در حالت خیس بیرون آورید (فقط برخی از کشورها).
- همیشه پخش کننده و واحد شناور را قبل از استفاده دستگاه جهت مکش مایعات، نصب کنید.
- در صورتی که دستگاه درست کار نکند، قبل از تمیز کردن دستگاه و بعد از باز کردن محفظه دستگاه، همیشه دوشاخه برق را از پریز بیرون بکشید.
- هنگامی که از دستگاه برای جارو کردن خاکستر، ماسه نرم، آهك، گرد و غبار سیمان و موادی مشابه استفاده می کنید، منافذ ریز کیسه کاغذی دستگاه مسدود می شوند. در نتیجه این کار، نشانگر پر بودن کیسه جارو را نشان می دهد. کیسه جاروی یکبار مصرف را تعویض کرده یا کیسه جارو برقی دائم را تخلیه کنید (فقط در برخی از کشورها)، حتی اگر کاملا پر نشده باشد (به فصل "تعویض" مراجعه کنید).
- فقط از کیسه های کاغذی Philips Athena یا از کیسه های گرد و غبار دایمی دستگاه استفاده کنید (فقط در برخی از کشورها).
- هرگز از دستگاه بدون فیلتر حفاظت موتور استفاده نکنید. این کار می تواند باعث آسیب رسیدن به موتور گردیده و عمر دستگاه را کوتاه کند.
- همیشه محفظه را بعد از استفاده در حالت خیس تمیز کرده و خشك کنید. بگذارید تا دستگاه برای چند دقیقه هوای خشك بدرون خود بکشید تا درون لوله و شیلنگ خشك شود. این کار از ایجاد بوی بد در نوبت بعدی استفاده از جارو برقی جلوگیری بعمل می آورد. این کار از خشك شدن کیسه گرد و غبار کاغذی جلوگیری بعمل می آورد. اگر از کیسه کاغذی یا کیسه قابل استفاده مجدد استفاده می کنید، فقط مواد خشك و گرد و خاك را جارو کنید.
- فقط هنگامی که مخزن شامپو را پر کرده اید و آن را روی دستگاه قرار داده و مخزن را با دو شیلنگ شامپو به دستگاه وصل کرده اید، پمپ را روشن کنید. بمحض خالی شدن مخزن شامپو پمپ را خاموش کنید. پمپ در صورتی که خشك کار کند ممکن است صدمه ببیند.
- برای افزایش طول عمر پمپ شامپو، آن را یك بار در سال با مخلوطی از آب و سرکه سفید تمیز کنید. دستورالعمل های فصل "تمیز کردن و نگهداری" را دنبال کنید.
- همیشه دستگاه را بعد از استفاده خاموش کرده و دوشاخه را از پریز خارج کنید.
- برای جلوگیری از یخ زدن، دستگاه را در درجه حرارتهای زیر ۰ درجه سانتی گراد نگهداری نکنید.
- میزان نویز: Lc= 82 dB [A]

میدان الکترومغناطیسی (EMF)

این دستگاه Philips ازکلیه استانداردهای میدان الکترو مغناطیسی (EMF) پیروی می کند. درصورت استفاده صحیح و بهره گیری از دستورالعمل های موجود در این دفترچه راهنما، طبق شواهد علمی موجود کنونی، استفاده ایمن از این دستگاه امکان پذیر می باشد.

آماده ساختن دستگاه برای استفاده

وصل کردن و باز کردن لوازم

شیلنگ

۱ برای وصل کردن شیلنگ، آن را در حالی که آن را کمی در جهت عقربه ساعت می چرخانید، در داخل اتصال شیلنگ جا بزنید (شکل ۲).

۲ برای باز کردن شیلنگ، آن را در حالی که آن را کمی در خلاف جهت عقربه ساعت می چرخانید، از اتصال شیلنگ جدا کنید (شکل ۳).

مقدمة

بخاطر خرید این دستگاه به شما تبریك می گوییم و به Philips خوش آمدید! برای استفاده کامل از پشتیبانی ارائه شده Philips، محصول خود را در www.philips.com/welcome ثبت کنید.

شرح کلی (شکل ١)

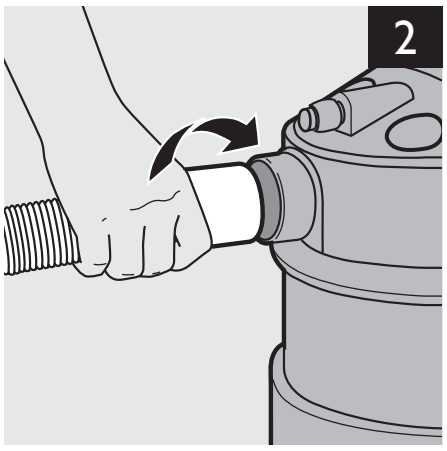
A استفاده خشك
1 اتصال شیلنگ
2 شیلنگ مکش
3 کنترل قدرت مکش مکانیکی
4 لوله مکش
5 لوله تلسکوپی سه تکه (فقط مدلهای خاص)
6 بست نگهداری (فقط مدلهای خاص)
7 دهانك
8 دکمه روشن/خاموش کردن موتور
9 دستگیره
10 دکمه جمع کردن سیم
11 فیلتر میکرو (فقط مدلهای خاص)
12 سیم برق
13 شکاف پارکینگ
14 بستها
15 واحد موتور
16 پلاك مدل
17 نگهدارنده کیسه گرد و خاك
18 کیسه گرد و غبار
19 ظرف نگهدارنده
20 وسیله ذخیره کرده برای ٢ ابزار کوچك (برس کوچك، دهانك کوچك، دهانك درز یا دهانك تاشو درز)
B استفاده در حالت خیس
1 گیره های شیلنگ شامپو
2 ماشه شامپو
3 شیلنگهای شامپو
4 اتصالهای شیلنگ شامپو
5 منبع شامپو
6 دکمه روشن/خاموش کردن شامپو با چراغ
7 پخش کننده
8 فیلتر حفاظت موتور
9 مایع تمیز کننده (HR6965) Philips
10 واحد شناور همراه با فیلتر کف
11 دهانك مبل
12 دهانك پاشش دوبل شامپو
13 آداپتور کف سخت

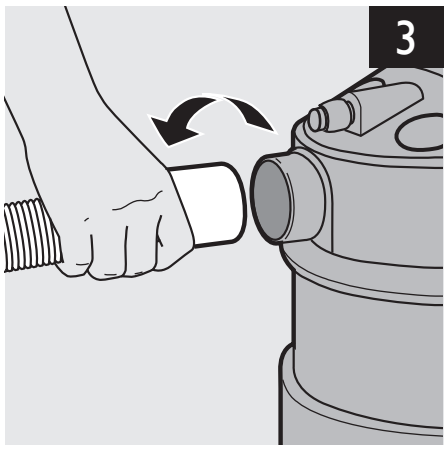
مهم

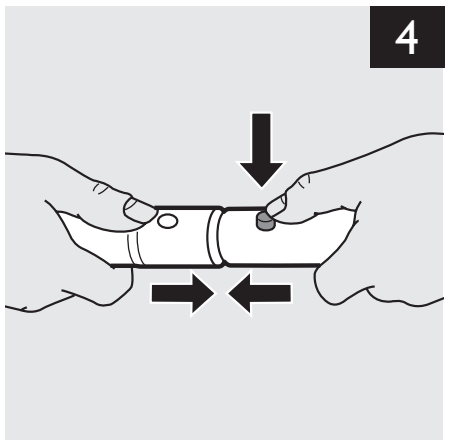
این راهنمای کاربر را قبل از استفاده از دستگاه با دقت بخوانید و آنها را برای مراجعه آینده نگهداری کنید.

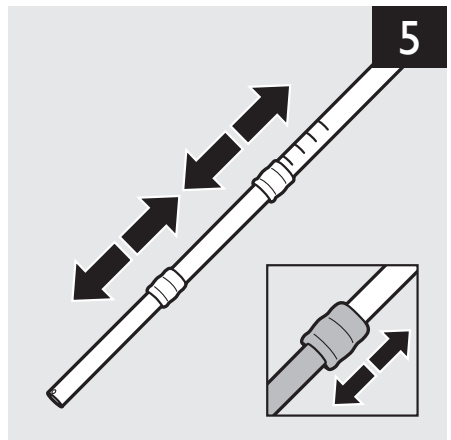
خطر

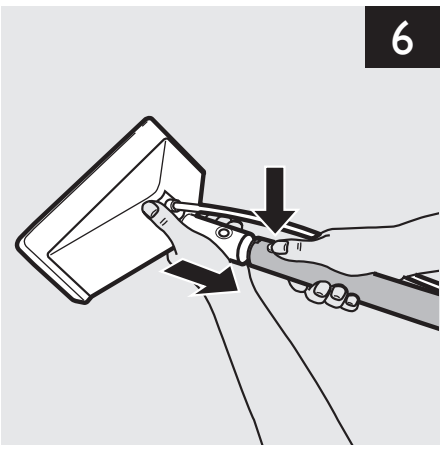
- تا زمانی که خاکستر بطور کامل خنك نشده باشد، هرگز خاکستر را جارو نکنید (از زیر سیگاریها و شومینه).
- هرگز بنزین، الکل سفید، گازوئیل، روغن پارافین یا مواد قابل اشتعال یا انفجار را جارو نکنید.
- هرگز از دستگاه در اتاقی که دارای بخار مواد قابل انفجار (مانند بنزین، تینر، انواع حلال) می باشد استفاده نکنید.
- هیچگاه واحد موتور را در آب فرو نبرید.
- هرگز جریان پاشش شامپو را بطرف دوشاخه ها، پریزها یا دستگاههای الکتریکی نگیرید.

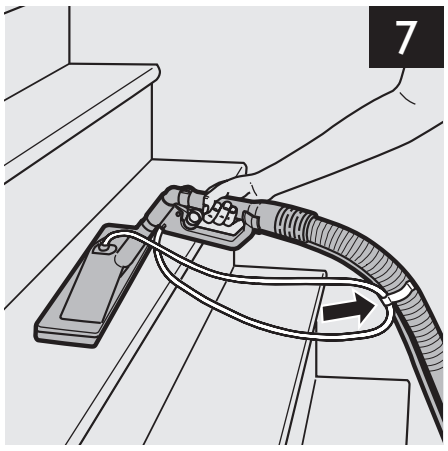

2

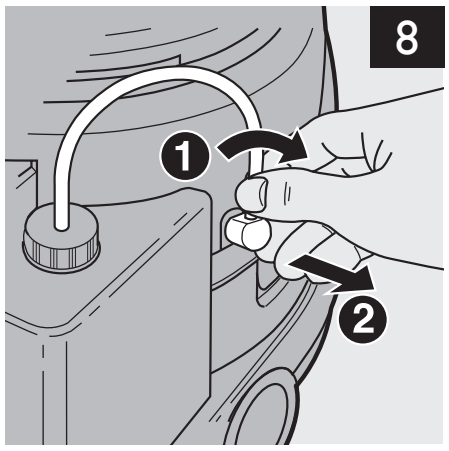

3

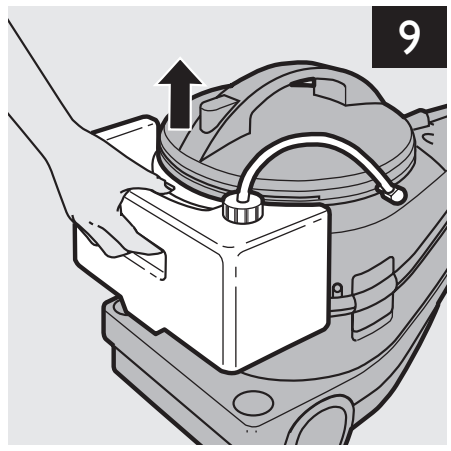

4

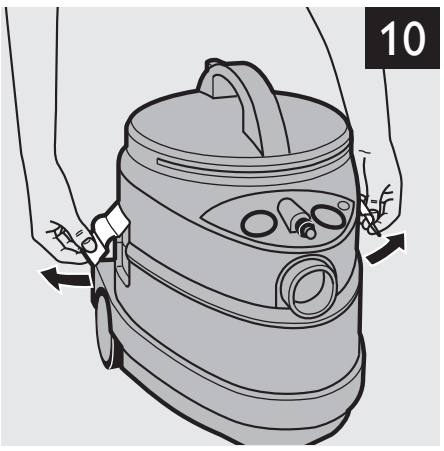

5

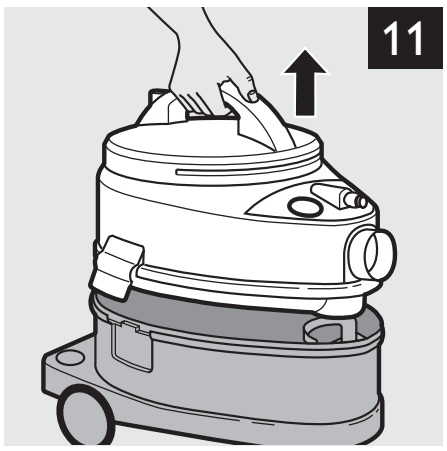

6

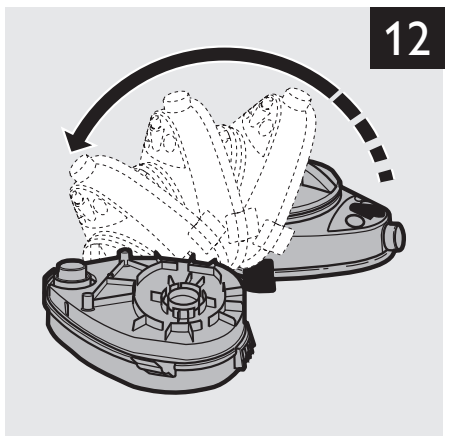

7

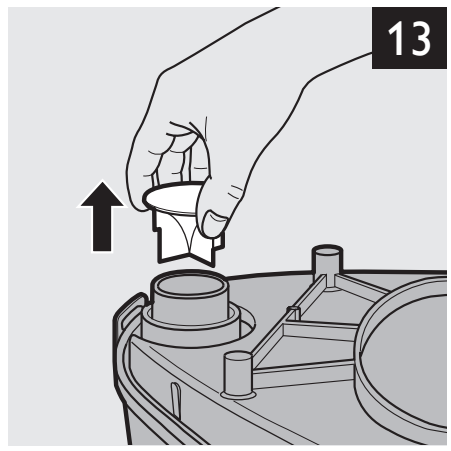

8
1
2

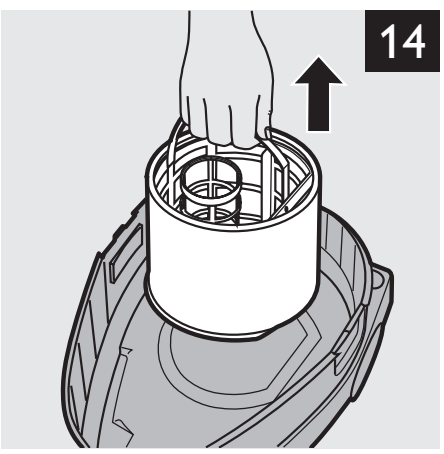

9

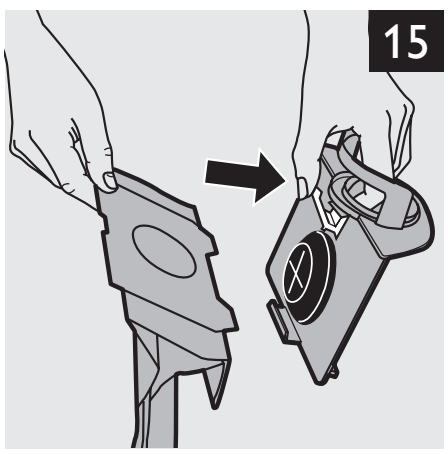

10

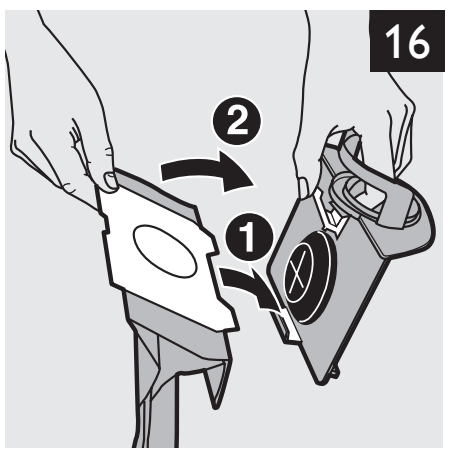

11

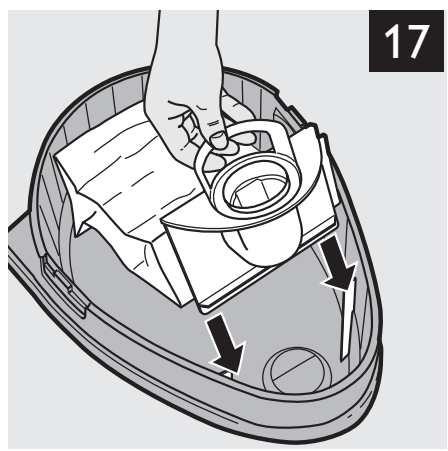

12


13

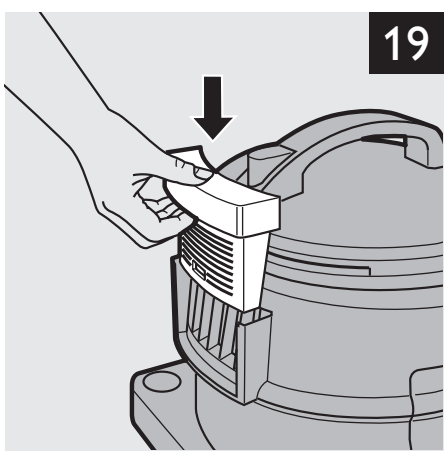

14

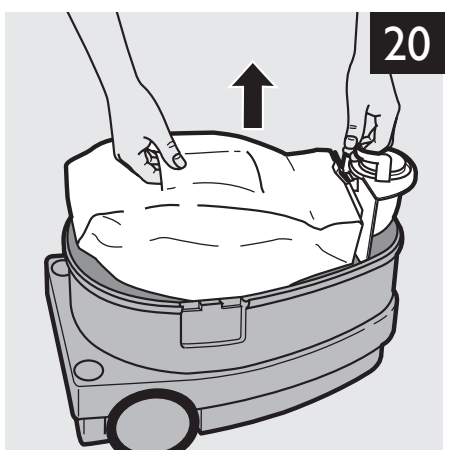

15

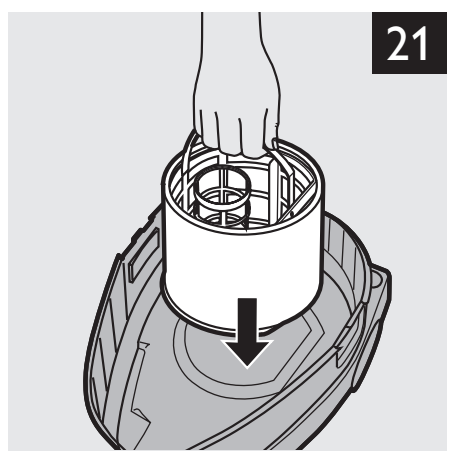

16
2
1

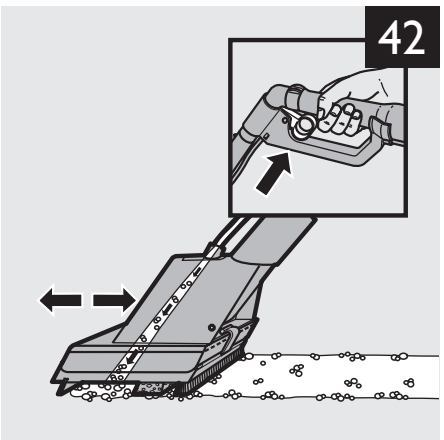

17

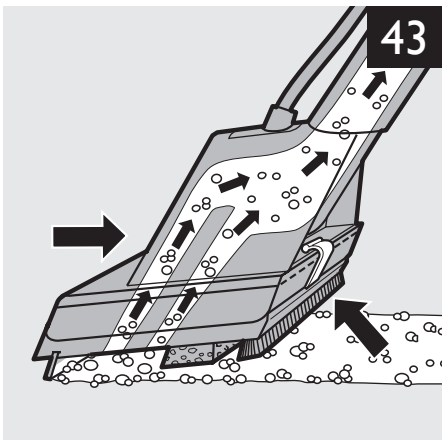

18
CLICK

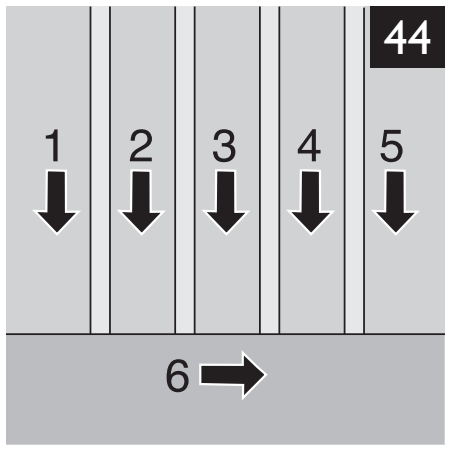

19

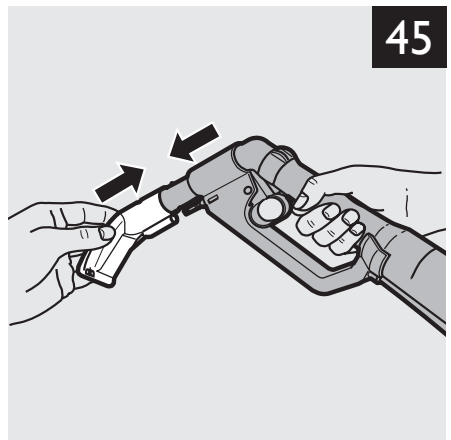

20

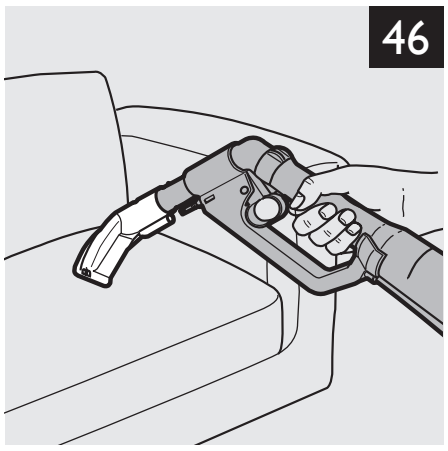

21

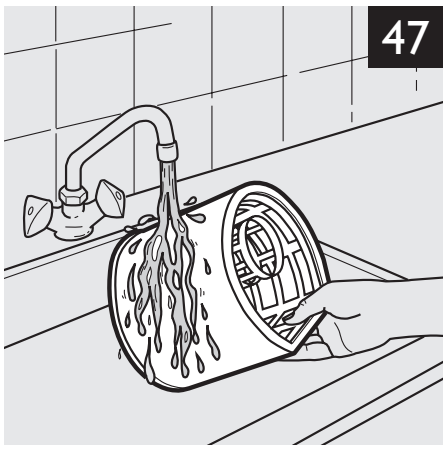

42

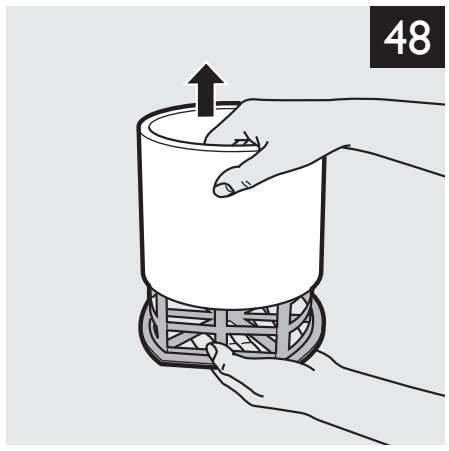

43

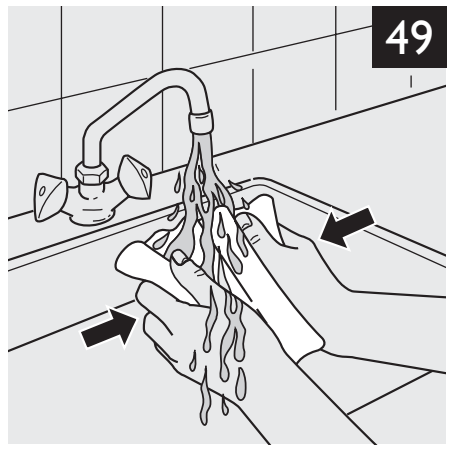

44
1
2
3
4
5
6

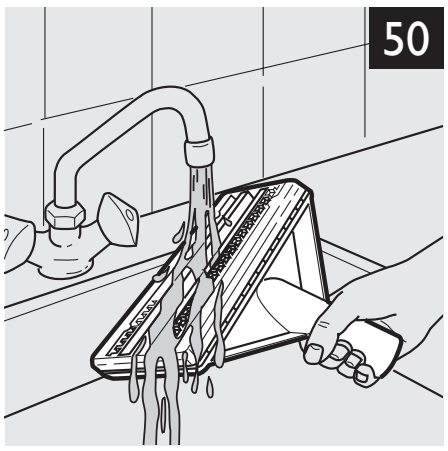

45

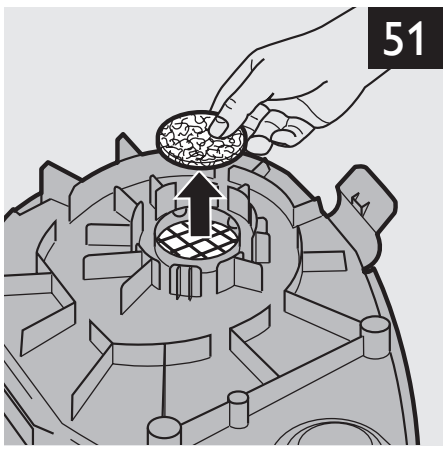

46

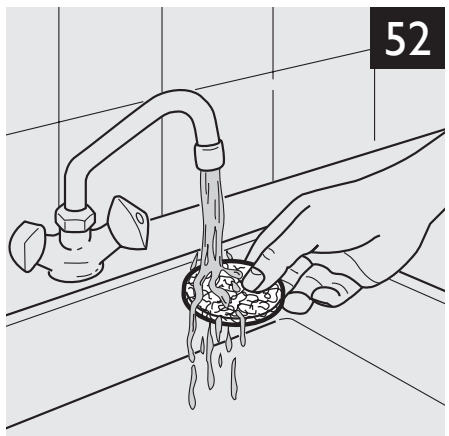

47

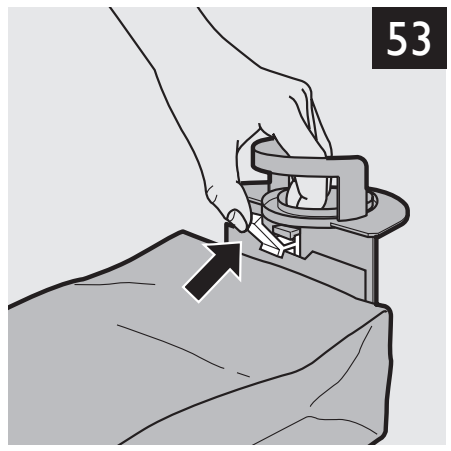

48

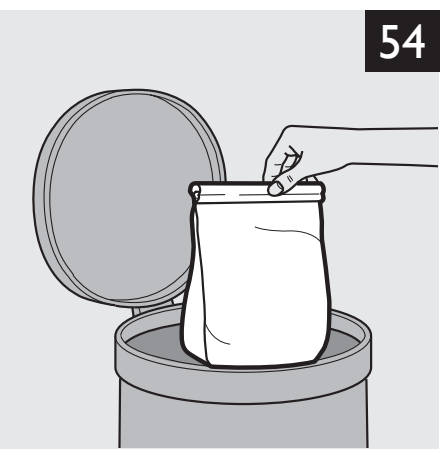

49

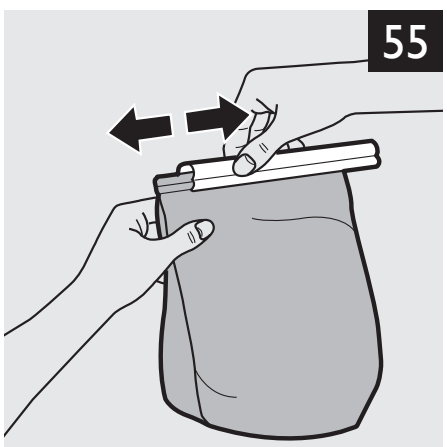

50

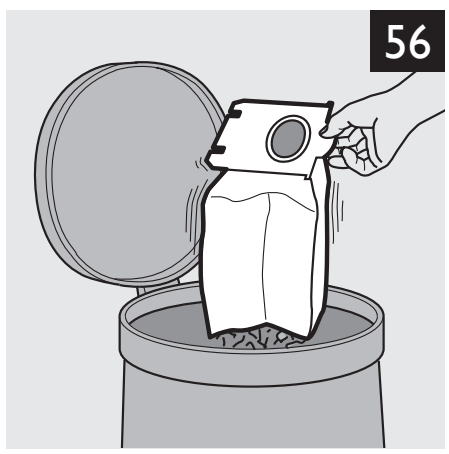

51

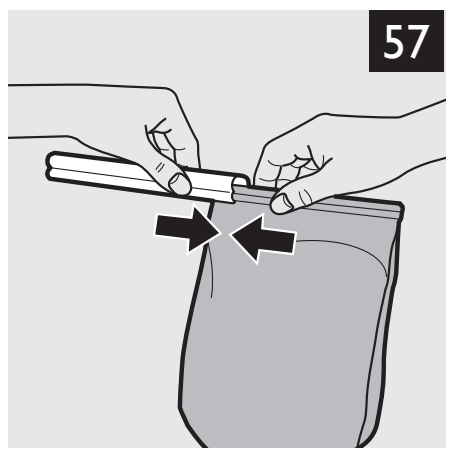

52

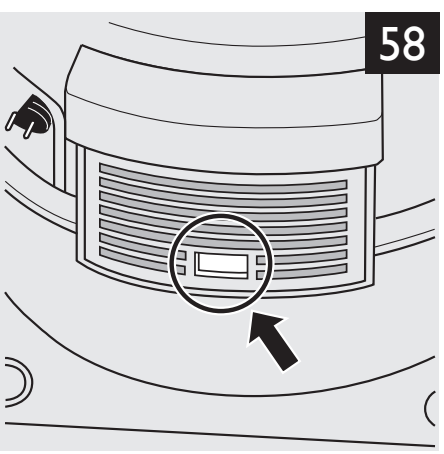

53


54

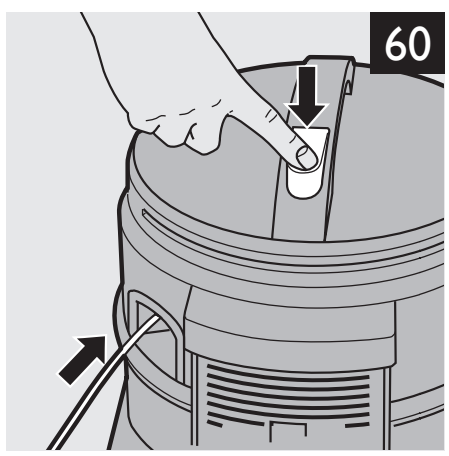

55

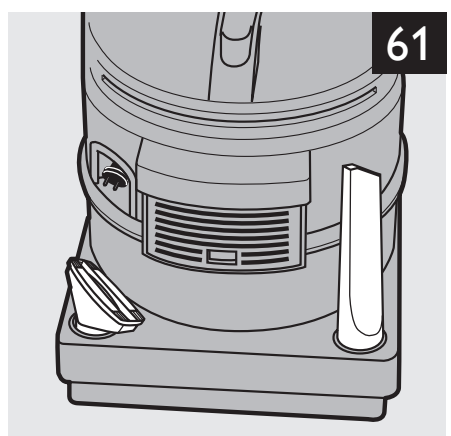

56


57


58


59
❷
❶


60


61